



(583022096)

Agrohellas 0-0-50 SOP komp.

- Set your spreader to the coarse material type.



1.52




3.20 mm



1.45 kg/l



12.5

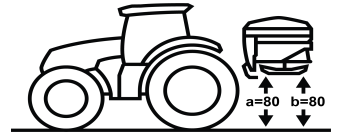

ZATS															
TS 1	15	23	600	A	1	720	1	27	600	1	37	500	16	0	240
	16	26	600	A	1	720	1	26	600	1	36	500	16	2	260
	18	24	800	A	1	720	1	28	720	1	38	600	20	-1	210
	20	26	900	A	1	800	1	26	800	1	36	720	22	-1	220
	21	28	900	A	1	800	1	26	800	1	36	720	22	-0	230
	24	33	900	A	1	800	1	24	800	1	34	720	22	3	290
	27	38	900	A	1	800	1	23	800	1	33	720	22	6	340
	28	40	900	A	2	800	2	22	800	2	32	720	22	7	360
TS 2	21	0	600	D	X	500	1	26	600	1	36	500	20	2	260
	24	0	800	B	3	900	3	28	800	3	38	720	24	-0	210
	27	0	900	D	X	720	1	25	800	1	35	720	27	0	220
	28	2	900	D	X	800	1	26	900	1	36	800	27	1	240
	30	5	900	D	X	800	1	24	900	1	34	800	27	3	270
	32	8	900	D	X	800	1	24	900	1	34	800	27	4	310
	33	10	900	D	X	800	1	24	900	1	34	800	27	5	330
TS 3	24	0	600	C	3	720	3	24	600	3	34	500	23	1	260
	27	0	800	C	3	900	3	24	800	3	34	720	28	-1	220
	28	0	900	C	3	900	3	23	800	3	33	720	29	-1	210
	30	0	900	D	X	720	1	22	800	1	32	720	30	0	240
	32	1	900	D	X	800	1	22	900	1	32	800	30	2	270
	33	3	900	D	X	800	1	22	900	1	32	800	30	2	280
	36	7	900	D	X	800	1	22	900	1	32	800	30	4	320
	39	12	900	D	X	800	2	20	900	2	30	800	30	6	370
	40	13	900	D	X	800	2	19	900	2	29	800	31	7	380



	Working width		Rate reduction in %
	Delivery system		Switch-on point [m]
	Spreading disc speed		Switch-off point [m]
	Side spreading		Throwing angle
	Boundary spreading		throw distance
	Water course spreading		Calibration factor
	Telescope		Granule diameter
	Telescope position		Bulk density

PTO shaft	1 : 1.33	Spreading disc speed
375		500
415		550
450		600
540		720
600		800
650		870
675		900
750		1000