



( 583022095 )

### Agrohellas SSA 21-0-0 + 24S gran.



1.00




4.19 mm



0.95 kg/l



16.1

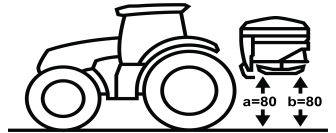

ZATS															
TS 1	15	32	600	A	1	500	1	28	500	1	38	500	19	-4	170
	16	33	600	A	1	500	1	27	500	1	37	500	19	-3	170
	18	37	600	A	1	720	1	26	600	1	36	500	20	-1	210
	20	38	720	A	1	600	1	25	600	1	35	500	23	-2	200
	21	40	720	A	1	600	1	24	600	1	34	500	23	-1	220
	24	43	900	A	1	800	1	23	800	1	33	720	27	-2	220
	27	47	900	A	1	800	1	22	800	1	32	720	27	-0	260
	28	48	900	A	1	800	1	20	800	1	30	720	27	1	280
	30	51	900	A	1	800	1	19	800	1	29	720	27	2	310
TS 2	24	9	600	B	3	720	3	29	600	3	39	500	25	-1	200
	27	15	600	D	X	500	1	26	600	1	36	500	25	2	250
	28	13	720	B	3	800	3	27	720	3	37	600	28	-0	210
	30	15	800	B	3	900	3	27	800	3	37	720	31	-1	210
	32	17	900	B	3	900	3	26	800	3	36	720	33	-1	200
	33	18	900	D	X	720	1	26	800	1	36	720	33	-1	220
	36	22	900	D	X	800	1	26	900	1	36	800	34	1	260
TS 3	24	5	600	C	2	720	2	27	600	2	37	500	29	-4	170
	27	8	600	C	3	720	3	25	600	3	35	500	29	-2	190
	28	9	600	C	3	720	3	24	600	3	34	500	29	-1	210
	30	12	600	C	3	720	3	23	600	3	33	500	29	0	240
	32	13	720	C	3	800	3	23	720	3	33	600	33	-1	220
	33	14	800	C	3	900	3	25	800	3	35	720	35	-2	210
	36	17	900	C	3	900	3	24	800	3	34	720	37	-1	220



( 583022095 )

### Agrohellas SSA 21-0-0 + 24S gran.



**1.00**




**4.19 mm**



**0.95 kg/l**



**16.1**

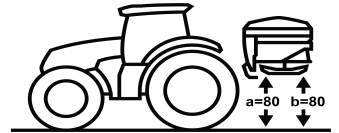

ZATS															
TS 3	<b>39</b>	20	900	D	X	720	1	22	800	1	32	720	37	0	260
	<b>40</b>	21	900	D	X	720	1	21	800	1	31	720	37	1	270
	<b>42</b>	24	900	D	X	800	1	21	900	1	31	800	38	2	290
	<b>44</b>	26	900	D	X	800	1	20	900	1	30	800	38	3	310
	<b>45</b>	27	900	D	X	800	1	18	900	1	28	800	38	4	320



	Working width		Rate reduction in %
	Delivery system		Switch-on point [m]
	Spreading disc speed		Switch-off point [m]
	Side spreading		Throwing angle
	Boundary spreading		throw distance
	Water course spreading		Calibration factor
	Telescope		Granule diameter
	Telescope position		Bulk density

PTO shaft	1 : 1.33	Spreading disc speed
375		500
415		550
450		600
540		720
600		800
650		870
675		900
750		1000